GOVERNOR REMOVAL

Only remove the governor if you are using the correct billet flywheel and connecting rod!

